

| | | |
|-----------|-----------|----------|
| APPROVED | C.G. FIG. | |
| BY | CLASS | SUBCLASS |
| DRAFTSMAN | | |

46

```
santa-sb# conf t
```

Enter configuration commands, one per line.
Edit with DELETE CTRL/W, CTRL/U; end with CTRL/Z

```
interface serial 1  
encapsulation ppp  
^Z
```

```
santa-sb# sh int s 1
```

Serial 1 administratively down, line protocol is down
Hardware is MCI Serial
MTU 1500 bytes, BW 1544 Kbit, DLY 20000 usec, rely 255/255, load 1/255
Encapsulation PPP, loopback not set, keepalive set (10 sec)

Fig. 1
(Prior art)

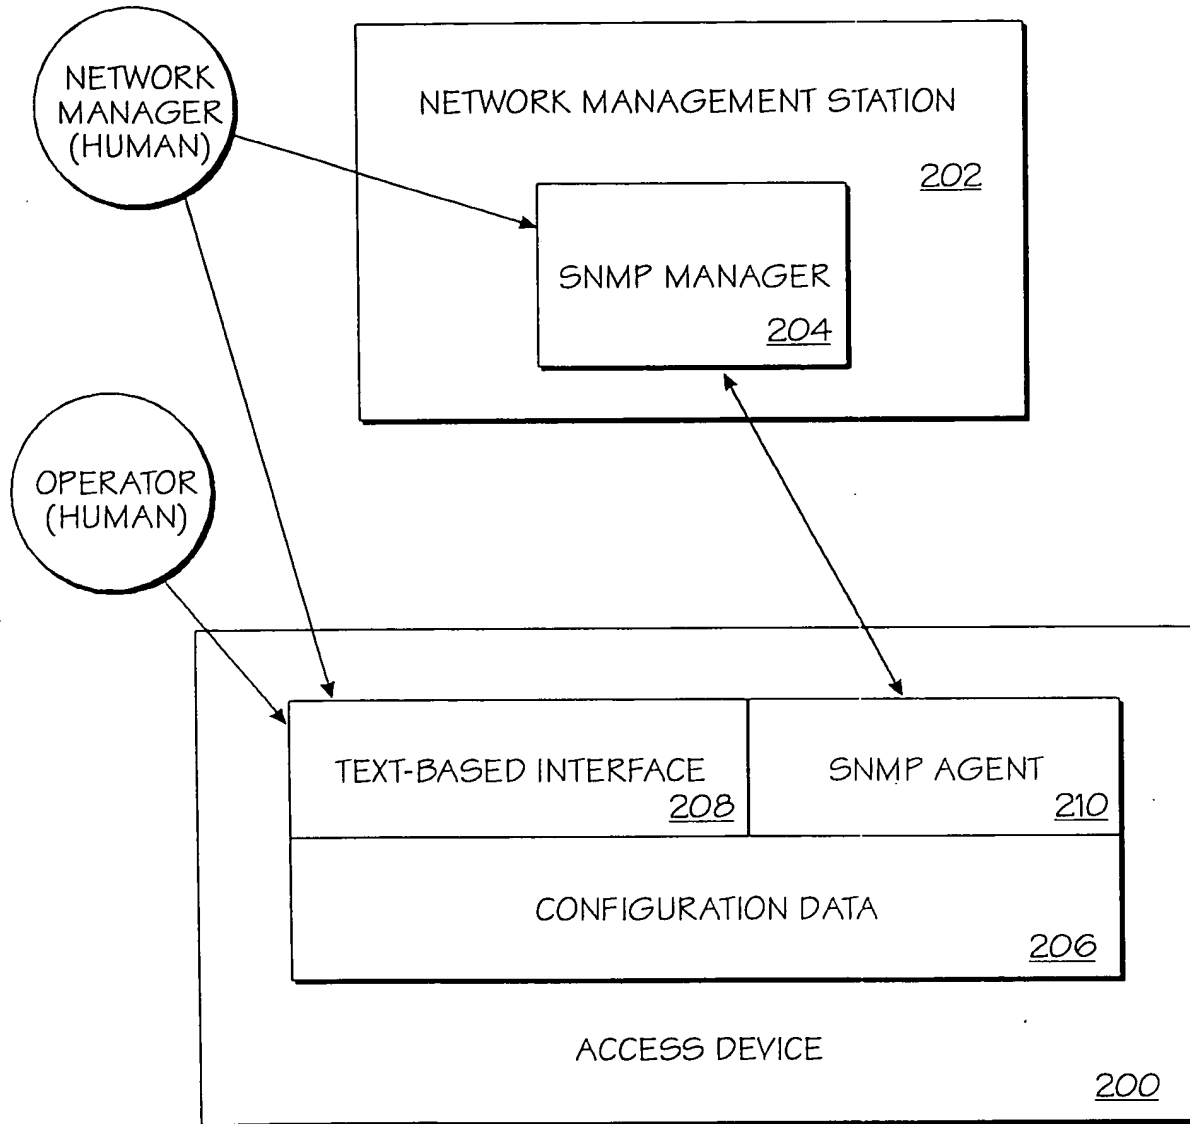


Fig. 2
(Prior art)

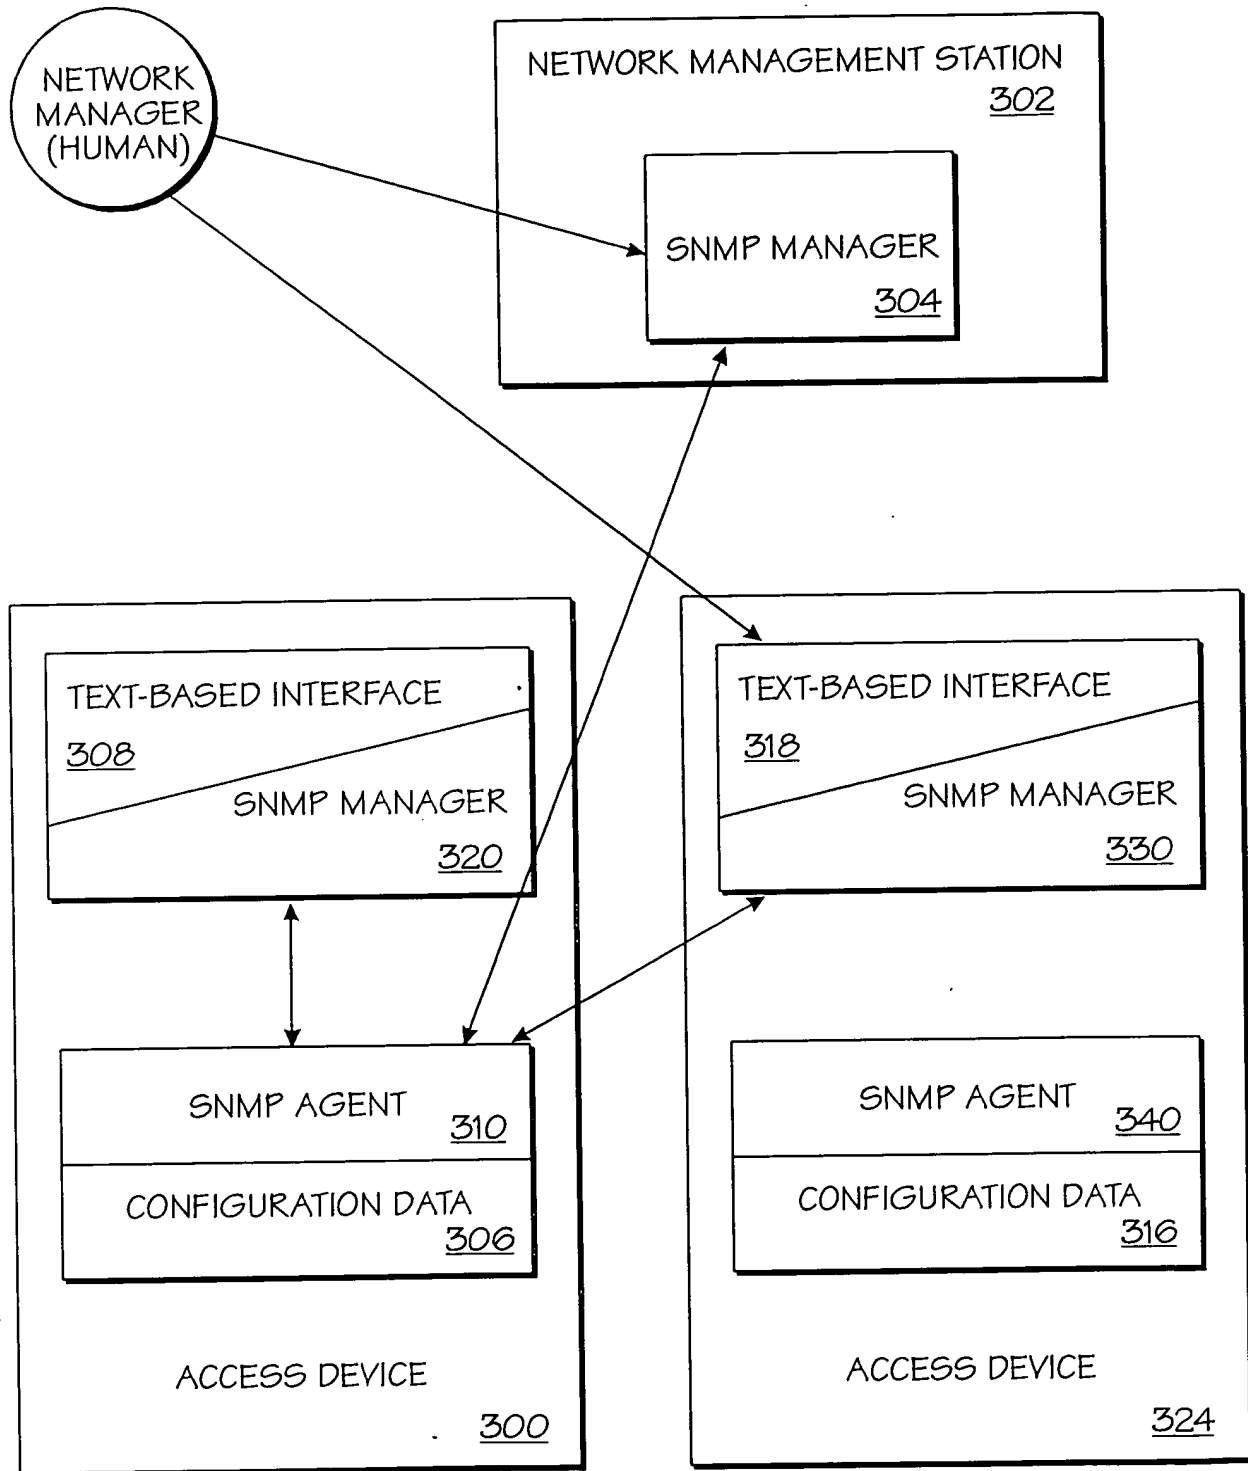


Fig. 3
(Prior art)

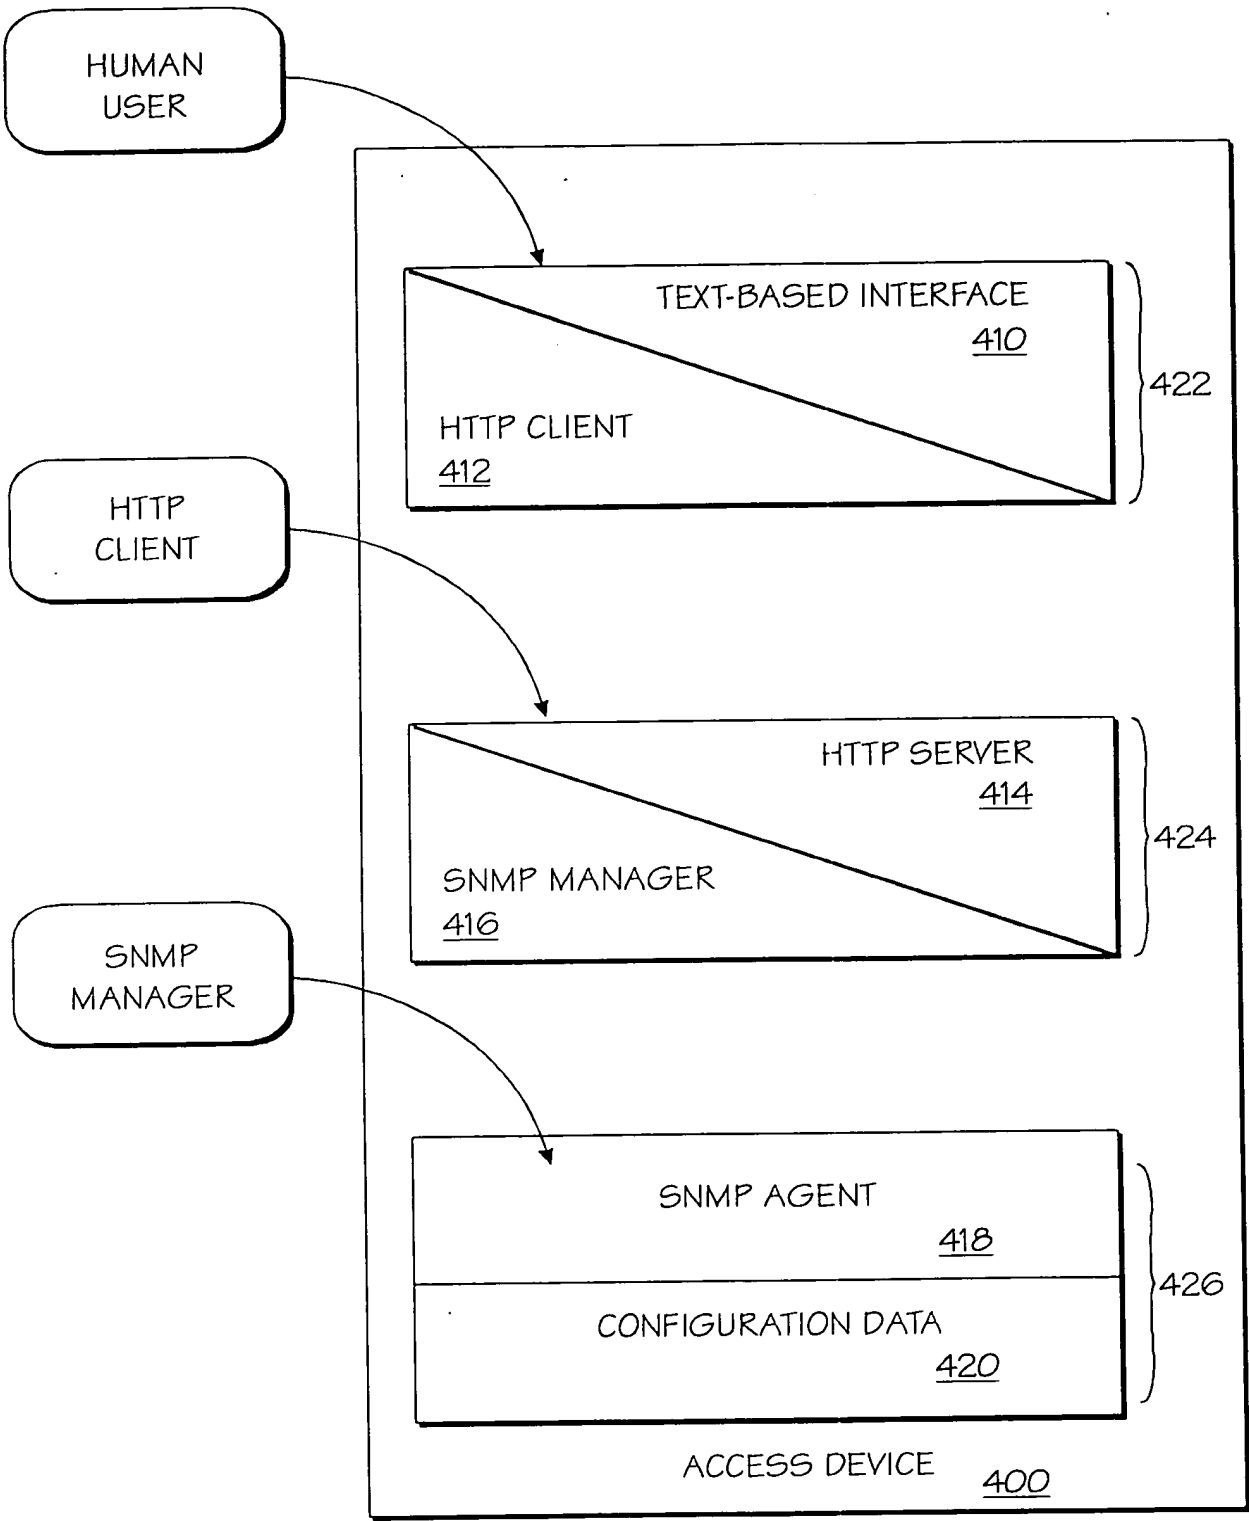


Fig. 4

```

5.1 <filename>onfo.dat
1) frLportCnfEntry 1.3.6.1.4.1.351.100.4.2.1.1.1 Aggregate not-accessible

704 {
    5.2 <filename>.defs
        1) frLportCnfEntry frLportCnfTable.1 Aggregate not-accessible mandatory
        2) %ei frLportCnfEntry "frLportSlotIndex" frLportPortIndex"
        3) frLportPortIndex frLportCnfEntry.1 INTEGER read-only mandatory
        4) %er frLportSlotIndex 1 32
        5) frLportPortIndex frLportCnfEntry.2 INTEGER read-only mandatory
        6) %er frLportPortIndex 1 32
        7) frLportClockType frLportCnfEntry.3 INTEGER read-write mandatory
        8) %ev frLportClockType normal 1
        9) %ev frLportClockType looped 2
        10) %ev frLportClockType none 3
        11) frLportOperStatus frLportCnfEntry.4 INTEGER read-only mandatory
        12) %ev frLportOperStatus inActive 1
        13) %ev frLportOperStatus active 2
        14) %ev frLportOperStatus looped 3
        15) %ev frLportOperStatus failed 4
        16) frLportPolVerTmr frLportCnfEntry.5 INTEGER read-write mandatory
        17) %er frLportPolVerTmr 5 30
        18) %er frLportDescr frLportCnfEntry.6 Octetstring read-write mandatory

```

Fig. 5

EXEMPLARY MIB TEXT FOR A FRAME-RELAY PORT

| | | |
|-----------|-----------|----------|
| APPROVED | O.G. FIG. | |
| BY | CLASS | SUBCLASS |
| DRAFTSMAN | | |

800



802 { FrameRelay Local Port Configure Slot 2 Port1

804 { Frame Relay Local Port Configure Slot:
• 2

806 { Frame Relay Local Port Configure Slot:
• 1

808 { Frame Relay Local Port Configure Clock Type:
• [Normal]
• Looped
• None

810 { Frame Relay Local Port Configure Oper Status :
• Inactive

812 { Frame Relay Local Port Configure Verification Timer :
• 5
• To change, enter new value in the range 5-30 and select Change
•

814 { Frame Relay Local Port Configure Description :
• IBM Mainframe Port
• To change, enter new string and select change
•

.Fig. 6